



for your baby ☺

Version: R1-1

# CHASE

## 3 WHEELER STROLLER INSTRUCTIONS

sign up

www.**OBABY**.co.uk

Create an account for **exclusive** offers, competitions and updates



*DESIGNED IN THE UK*

**IMPORTANT**  
KEEP FOR FUTURE REFERENCE  
PLEASE READ THESE INSTRUCTIONS  
CAREFULLY BEFORE USING THIS PRODUCT

Thank you for choosing Obaby. This stroller conforms to EN 1888:2012. To ensure that your stroller is used in accordance with these instructions, please read them fully.

Your child's safety may be affected if you do not follow these instructions.

- ⚠ **WARNING:** A child's safety is your responsibility
  - ⚠ **WARNING:** Ensure that all the locking devices are engaged before use
  - ⚠ **WARNING:** Never leave your child unattended
  - ⚠ **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product
  - ⚠ **WARNING:** Do not let your child play with this product
  - ⚠ **WARNING:** Use the harness at all times
  - ⚠ **WARNING:** This product is not suitable for running or skating
  - ⚠ **WARNING:** Any load attached to the handles will affect the stability of the pram / pushchair
  - ⚠ **WARNING:** Check that the seat unit is correctly engaged before use
  - ⚠ **WARNING:** Do not use the stroller if any part is broken, torn or missing and use only spare parts approved by the manufacturer
- A basket is provided for the carriage of other items up to a maximum permissible weight of 3 kg. Where a hood parent pocket is provided, an additional 1kg maximum permissible weight can be used within this
  - This stroller is intended to carry one child from 6 months and up to a maximum weight of 15kg
  - Always apply the brake when placing your child into, or removing your child from the stroller

#### ROUTINE CARE & MAINTENANCE

- This stroller requires regular maintenance by the user
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks, rain covers, etc, other than those approved by the manufacturer or distributor.
- For cleaning, use only a mild detergent and warm water
- **DO NOT USE BLEACH**
- **DO NOT USE** any abrasive substances
- From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Obaby retailer from whom you purchased your product, who will take appropriate action.





fig. 1



fig. 2



fig. 3



fig. 4



fig. 5



fig. 6

To unfold your stroller, release the primary lock by pressing the button on the right side of the frame. While keeping this button pressed, release the secondary lock by lifting the handle (fig.1 & 2).

Lift the handle up away from the wheels (fig.2 & 3) until it clicks into place (fig.4).

To fold your stroller, first remove the stroller seat unit (see page 9 for details) then release the primary lock by pressing the button on the right side of the frame. While keeping this button pressed, release the secondary lock by lifting the lever. Also lift the lever on the left hand side of the frame (fig.5).

Lower the handle towards the wheels (fig.6).

The wheels can be removed if you wish (see page 5 for details).

**⚠ WARNING:** Ensure that all the locking devices are engaged before use



fig. 7



fig. 8



fig. 9



fig. 10



fig. 11



fig. 12

To fit the rear wheels, slide the wheel shaft into the hole on the frame, until they click into place (fig.7).

To remove the rear wheels, press the lever on the inside of the wheel mount (fig.8) and simply slide the wheel out (fig.9).

To fit the front wheels, simply slide the wheel on to the shaft on the front of the frame (fig.10) until they click into place (fig.11).

To remove the front wheels, press the button beneath the front wheel (fig.12) and pull away from the frame.



fig. 13



fig. 14



fig. 15

To lock the swivel wheel, push the lever down on the front of the wheel (fig.13).

To put the wheel in swivel mode, lift the lever up (fig.14 & 15).



fig. 19



fig. 20



fig. 21

To adjust the handle, press the button underneath the top of the handle (fig 19), then lift or lower the handle to the required position and release the button. The handle should click into place (fig.20 & 21).

## Applying the Brake



fig. 16



fig. 17



fig. 18

To lock the brake, push down on the brake lever using your foot (fig.16 & 17).

To release the brake, lift the brake lever using your foot (fig.18).

## Fitting and Removing the Bumper



fig. 22



fig. 23



fig. 24

To fit the bumper, slide the bumper into the receivers on either side of the chassis (fig.22) until it clicks into place (fig.23).

To remove the bumper, simply press the button on either side of the chassis and pull away from the frame (fig.24).

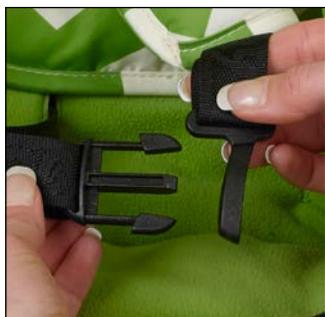


fig. 25



fig. 26



fig. 27



fig. 28

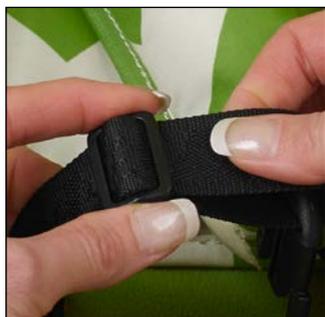


fig. 29



fig. 30

To fasten the harness, insert each waist strap fastener through the loop on each chest strap (fig.25). Then insert both waist strap fasteners into the clasp on the crotch strap (fig.26 & 27).

To release the harness, squeeze each of each clips in the centre of the harness and pull away from the clasp, one at a time (fig.28).

Adjust the harness length using the buckles on each strap (fig.29).

#### 'D' Ring

The 'D' rings highlighted are provided for fitting a separate harness complying with BS 6684 (fig.30).

**⚠ WARNING:** Always use the crotch strap in combination with the waist belt



fig. 31



fig. 32



fig. 33

The seat unit can face either forwards or backwards. To put the seat unit onto the chassis, line up the seat coupler with the chassis fittings on each side and lower onto the chassis (fig.31), ensure it clicks into place on both sides (fig.32).

To remove the seat from the chassis, press both release buttons on each side of the seat unit (fig.33) and lift the seat up, away from the chassis.

**⚠ WARNING:** Ensure that all the locking devices are engaged before use

## Adjusting the Recline



fig. 34



fig. 35



fig. 36

To recline the seat, while pressing the recline buttons on both sides of the seat (fig.34), tilt the seat to the desired angle (fig.35 & 36). Release the buttons to click into position.



fig. 37



fig. 38



fig. 39

To fit the hood, place the hood on the chassis, in line with the seat unit. Move the hood clip over the locating pin on either side of the chassis (fig.37). Press down on the clip to secure into place (fig.38 & 39).

To remove the hood, lift the hood clip on each side of the hood and slide the hood off the chassis.



fig. 43



fig. 44



fig. 45

To adjust the calf rest press the buttons either side of the seat and lift or lower to the required position (fig.43-45).

## Adjusting the Hood



fig. 40



fig. 41



fig. 42

To fold the hood, simply move the hood to the desired position, as shown above.

## Using the Raincover with the Seat



fig. 46



fig. 47

To fit the raincover, simply place the raincover over the seat and tuck under the foot rest. The zip can be used for access.

**⚠ WARNING:** When using the raincover, regularly check your child has adequate ventilation and is not overheating. Unless it is raining, the raincover should be removed.



for your baby ☺

**OPTIONAL**

# CHASE CARRYCOT INSTRUCTIONS

sign up

www.**OBABY**.co.uk  
Create an account for **exclusive** offers, competitions and updates

5 Year Extended Guarantee  
**5** Year  
\*\*\*\*\*  
Simply register within 28 days!



DESIGNED IN THE UK

**IMPORTANT**  
KEEP FOR FUTURE REFERENCE  
PLEASE READ THESE INSTRUCTIONS  
CAREFULLY BEFORE USING THIS PRODUCT

Thank you for choosing Obaby. This carrycot conforms to BSEN1466:2004 + A1:2007. To ensure that your carrycot is used in accordance with these instructions, please read them fully.

Your child's safety may be affected if you do not follow these instructions.

- ⚠ **WARNING:** This product is not suitable for a child who can sit up unaided
  - ⚠ **WARNING:** Do not let other children play unattended near the carrycot
  - ⚠ **WARNING:** Do not use if any part is broken, torn or missing
  - ⚠ **WARNING:** Do not leave your child unattended
  - ⚠ **WARNING:** Never use the carrycot on a stand
  - ⚠ **WARNING:** Do not add a mattress thicker than 30mm
  - ⚠ **WARNING:** Do not use this product as a bed, your child may become tangled in straps and suffocate.
  - ⚠ **WARNING:** Check that the carrycot is correctly engaged before use
- Use only on a firm, horizontal level and dry surface
  - Be aware of the risk of open fire and other source of strong heat, such as electric bar fires, gas fires, etc., in the near vicinity of the carrycot
  - The carrycot, including handle and bottom, should be inspected regularly for signs of damage and wear

#### ROUTINE CARE & MAINTENANCE

- This stroller requires regular maintenance by the user
- It may be unsafe to use replacement parts or accessories e.g. child seats, bag hooks, rain covers, etc, other than those approved by the manufacturer or distributor.
- For cleaning, use only a mild detergent and warm water
- **DO NOT USE BLEACH**
- **DO NOT USE** any abrasive substances
- From time to time, check your carrycot for loose screws, worn parts, torn material or stitching. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Obaby retailer from whom you purchased your product, who will take appropriate action.





fig. 48



fig. 49



fig. 50



fig. 51



fig. 52



fig. 53



fig. 54



fig. 55



fig. 56

To assemble the carrycot, first fit the metal support rods. Swing downwards using the attached strap (fig.48 & 49) until they click into place under the retaining clips on the base board. (fig.50).

Insert the chassis adaptors into the receivers on either side of the carrycot shell (fig.51) until they click into place (fig.52). To remove the chassis adaptors press the button whilst removing the adaptor (fig.53).

Insert liner into the carrycot shell (fig.54). Attach liner to carrycot shell using zips at both ends of the shell (fig.55). Insert the mattress (fig.56)

### Using the apron



fig. 57

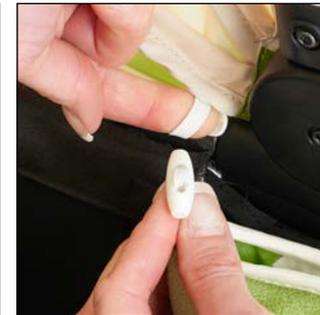


fig. 58



fig. 59

Attach the apron to the carrycot shell using the zip (fig.57). Secure the top of the apron in place with the toggle on either side of the hood (fig.58 & 59).



fig. 60



fig. 61



fig. 62

To put the carrycot onto the chassis, line up the carrycot coupler with the chassis fittings on each side and lower onto the chassis (fig.60), ensure it clicks into place on both sides (fig.61).

To remove the carrycot from the chassis, press both release buttons on each side of the carrycot (fig.62) and lift the carrycot up, away from the chassis.

**⚠ WARNING:** Ensure that all the locking devices are engaged before use

### Adjusting the Carrycot Hood



fig. 63



fig. 64



fig. 65

To adjust the hood press the hood adjustment buttons on either side of the carrycot and lower or lift the hood (fig.63-65).



fig. 66



fig. 67



fig. 68

To fit the raincover, simply place the raincover over the carrycot and tuck under the front and back of the base (fig.66).

The flap on the handle can be used to gain access to the handle, without the need for removing the raincover (fig.67).

The zip can be used for access (fig.68).

**⚠ WARNING:** When using the raincover, regularly check your child has adequate ventilation and is not overheating. Unless it is raining, the raincover should be removed.



for your baby ☺

OPTIONAL

# CHASE TRAVEL SYSTEM INSTRUCTIONS

sign up

www.**OBABY**.co.uk

Create an account for exclusive offers, competitions and updates

5 Year Extended Guarantee  
**5** Year  
\*\*\*\*\*  
Simply register within 28 days!

DESIGNED IN THE UK

**IMPORTANT**  
KEEP FOR FUTURE REFERENCE  
PLEASE READ THESE INSTRUCTIONS  
CAREFULLY BEFORE USING THIS PRODUCT

For safety warnings, care and maintenance please refer to the instruction manual provided with your car seat.





fig. 69



fig. 70



fig. 71



fig. 72



fig. 73



fig. 74

To put the car seat onto the chassis, first remove the stroller seat unit (see page 9 for details).

Then fit the car seat adaptors to the chassis (fig.69 & 70) ensure the release levers are towards the front wheels.

Lower the car seat onto the adaptors (fig.71), ensure it clicks into place on both sides (fig.72).

To remove the car seat from the chassis, either press the release buttons on either side of the car seat and lift the car seat up, away from the adaptors (fig.73), or press the release buttons on either side of the car seat adaptors and lift the car seat and adaptors up, away from the chassis (fig.74).

**⚠ WARNING:** Ensure that all the locking devices are engaged before use

#obabyUK

